

DTC	C1201/51	ENGINE CONTROL SYSTEM MALFUNCTION
------------	-----------------	--

CIRCUIT DESCRIPTION

If trouble occurs with the engine control system, the ECM transmits the abnormality to the skid control ECU. The skid control ECU sets this DTC and prohibits TRAC and VSC control.

DTC No.	DTC Detection Condition	Trouble Area
C1201/51	Malfunction signal is received from ECM.	Engine control system

INSPECTION PROCEDURE

1	CHECK DTC (FOR ENGINE CONTROL SYSTEM)
----------	--

(a) Check if the normal system code is recorded for the EFI system (see page 05-41, 05-437).

Result:

Normal system code	A
Trouble code	B

B

**REPAIR ENGINE CONTROL SYSTEM
ACCORDING TO OUTPUT CODE
(SEE PAGE 05-57, 05-452)**

A

REPLACE ECM (SEE PAGE 10-11, 10-27)
--