Operating manual iks vario 4 pro version 1.0

1. Please connect the power supply into a 230V outlet.

2. Please connect the plug on the small cable (12V_) to the "Powersocket" on the device.

After **changing the stock** (or at the beginning of the use) you can easily remove the air from the hose by pressing the switch (**T**) until there are no bubbles any more.

Important!

CE @ Bes

Jod musn't be pumped with another pump than the one marked with "Jod"!

Programming:

The "iks aquastar vario 4 pro" will be recognised from the iks aquastar or iks aquastar midi as an switch socket and can be programmed in the same way. Please refer to the operating manual of the iks aquastar or iks aquastar midi.

There are black rubber-joints (**D**) on the hoses for transportation. Please replace them with the adapters (**A**). We recommend to use the rubber-joints (**D**) again for transportation.

12V_ **LED** aquastar L1, L2, L3, L4

3. Please connect the cable from the device direct to L1 or L2 of the *iks aquastar midi*, or to L1, L2, L3 or L4 of the *iks aquastar*.