


BP laser

Bolaser.com

Assembly Instructions for AIR CONDITIONER

Contents: (Parts for this kit 48 - Makes Three Air Conditioners)

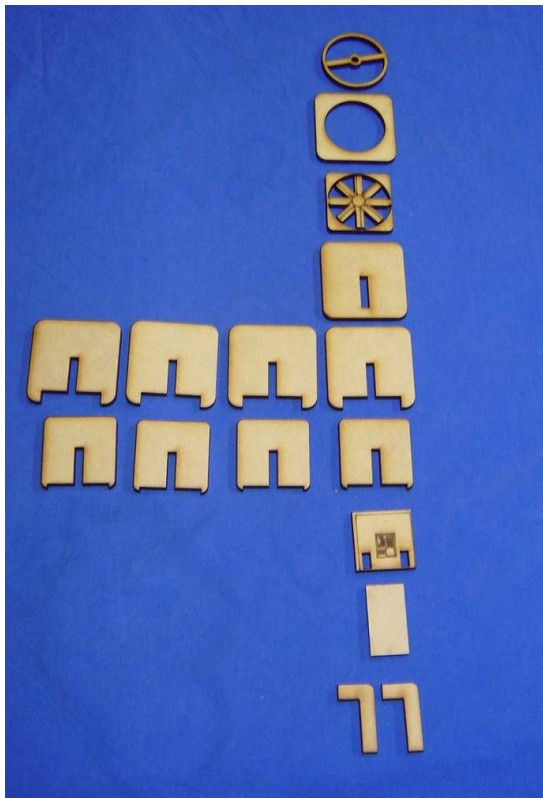

Fan Fairing x3

Fan Surround x3

Fan x3

Bottom Plate x3

Large Heat Sink Plate x12

Small Heat Sink Plate x12

Control Panel x3


Spacer x3

Pipes x6


Assembly Instructions:

We recommend you use P.V.A (or white) glue for this kit.


1. Glue **Fan Fairing** to **Fan Surround** as shown.

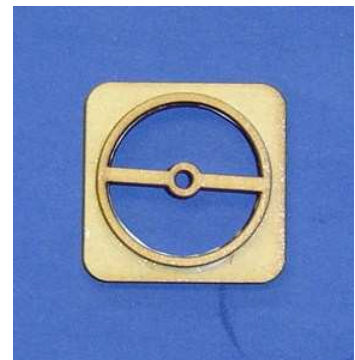


2. Glue **Fan** underneath **Fan Surround** to make a **Fan Fairing Assembly**.

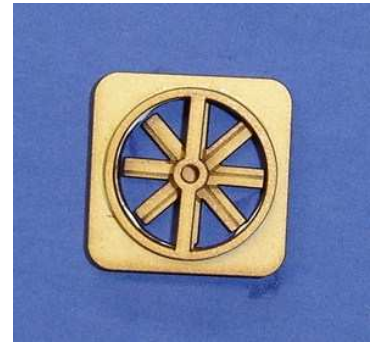

3. Glue **Spacer** into **Bottom Plate** as shown.

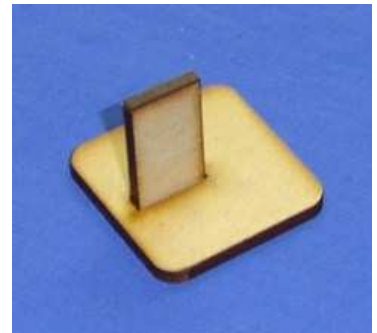

4. Following the steps below, beginning with a **Small Heat Sink Plate**, glue alternating layers of **Small Heat Sink Plates** with **Large Heat Sink Plates**, using the **Spacer** as a key.

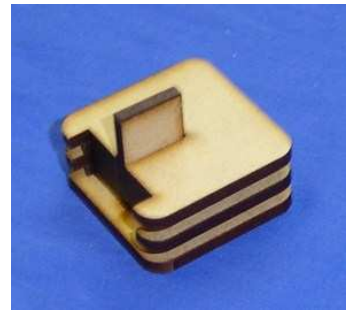

5. Glue the **Fan Fairing Assembly** to the top of the stacked **Heat Sink Plates** as shown.



6. Glue the **Control Panel** to the indented section of the stacked **Heat Sink Plates**, taking note to have the two holes in the **Control Panel** uppermost as shown.



7. Glue the two pipes into the two holes in the **Control Panel** as shown.

