


BP Laser


Bplaser.com

Assembly Instructions for Department store Building 12


Contents as shown: (Part Count this kit 81)

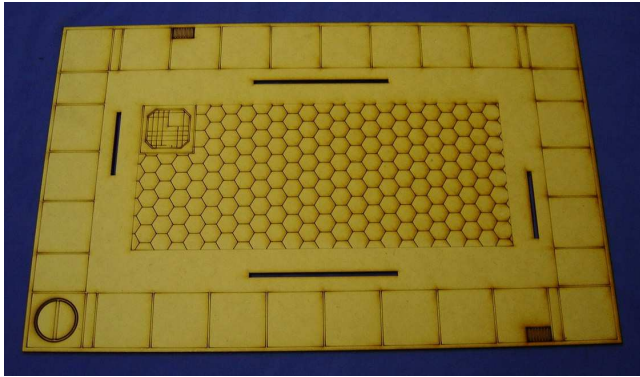

Sidewalk x1

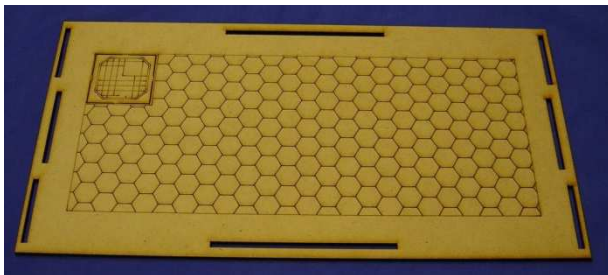


Floor Plate x3

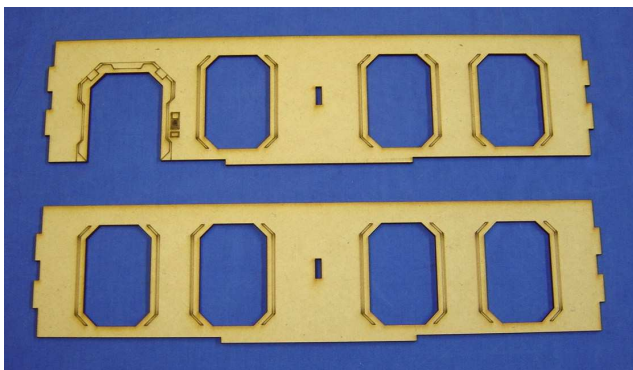

Front Wall with Door x2


Long Walls with Windows x4

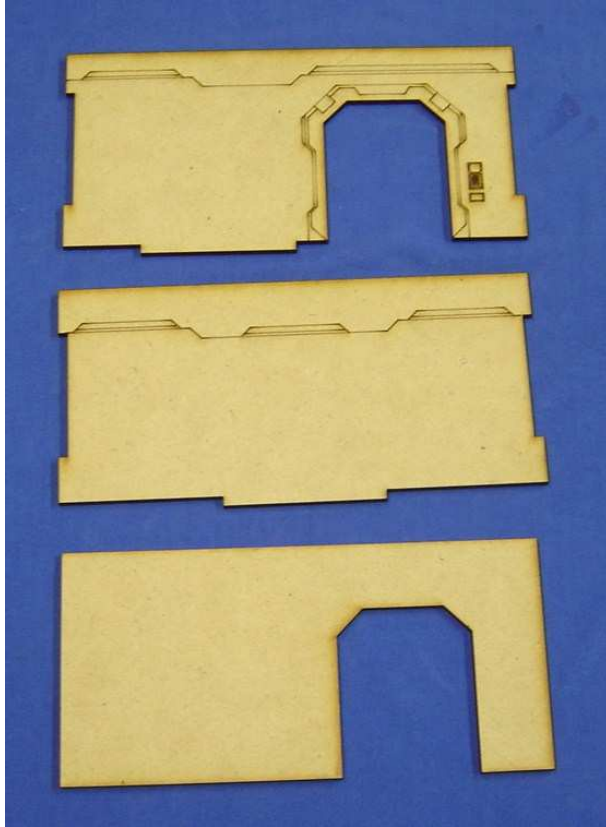

Side Wall with Door x2

Side Wall x4


Internal Wall x3

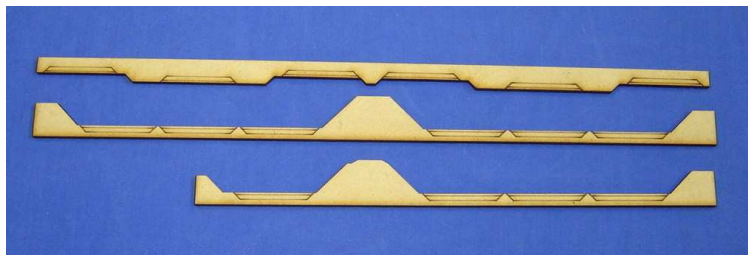


Top Wall Decoration x6

Bottom Wall Decoration x4

Bottom Wall Decoration for Door x2

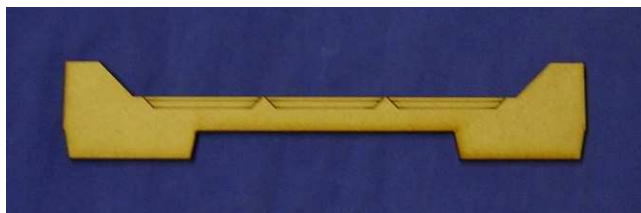

Roof Clips x6

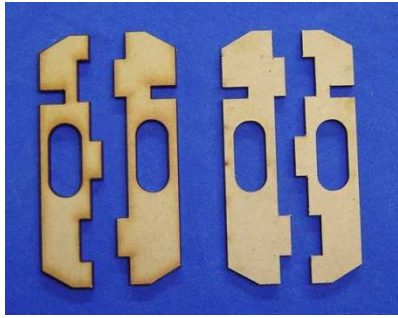


Side Decorations Male x12

Side Decorations Female x12



Wall Centre Decorations x6

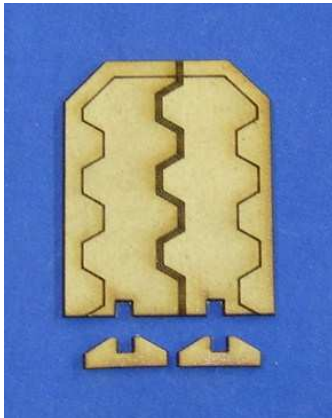


Door x2

Door Supports x4



Long Roof balcony x2




Short Roof Balcony x2


Assembly Instructions:

We recommend using PVA (or white) glue and that some parts are best painted **PRIOR** to gluing the building together.


1. Glue along bottom and side edge and tabs of **Wall with Doors and Windows** and **Side Wall** and insert into corresponding slots in the **Sidewalk** as shown.

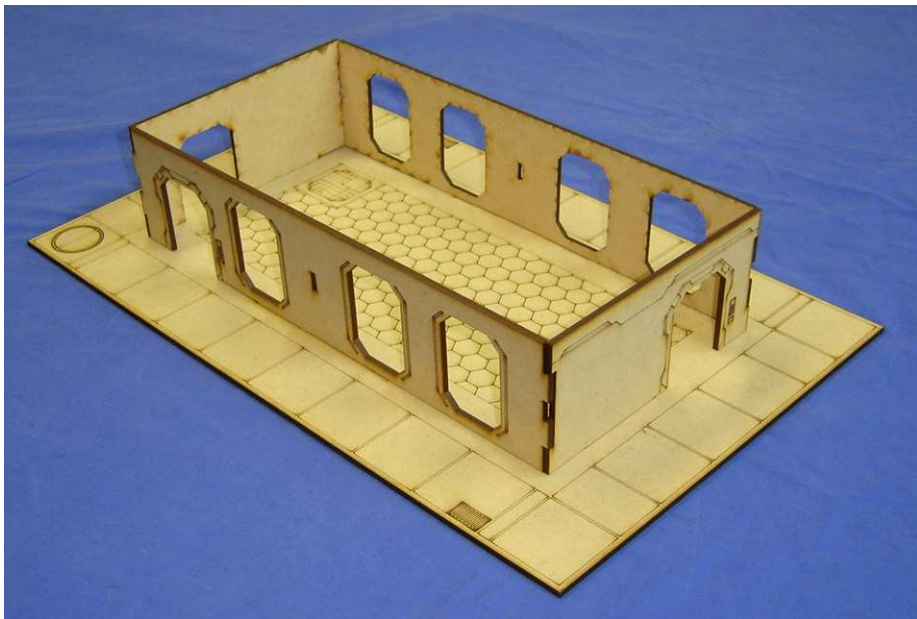

2. Using the following Pictures as a guide, glue the **Top and Bottom Wall Decoration Pieces** and **Wall with Doors Bottom Decoration (Left)** (circled in **RED**) to the walls as shown.

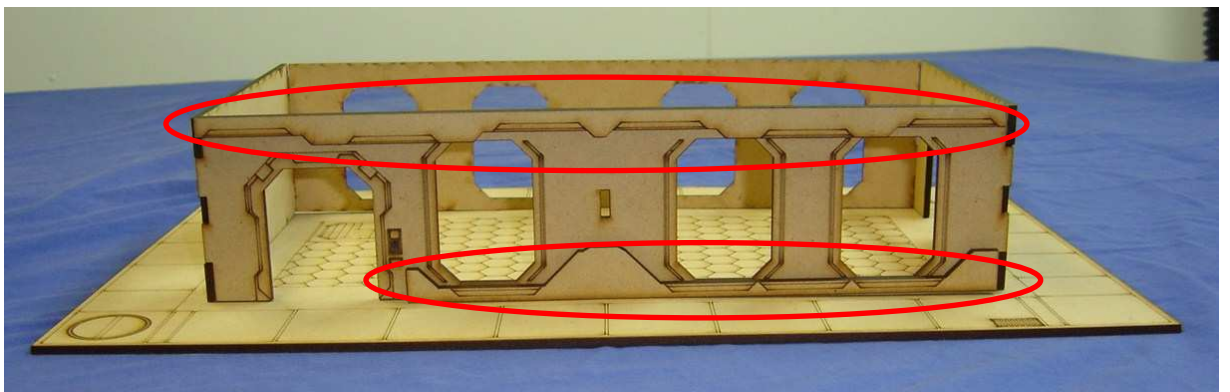


Front Wall with Door

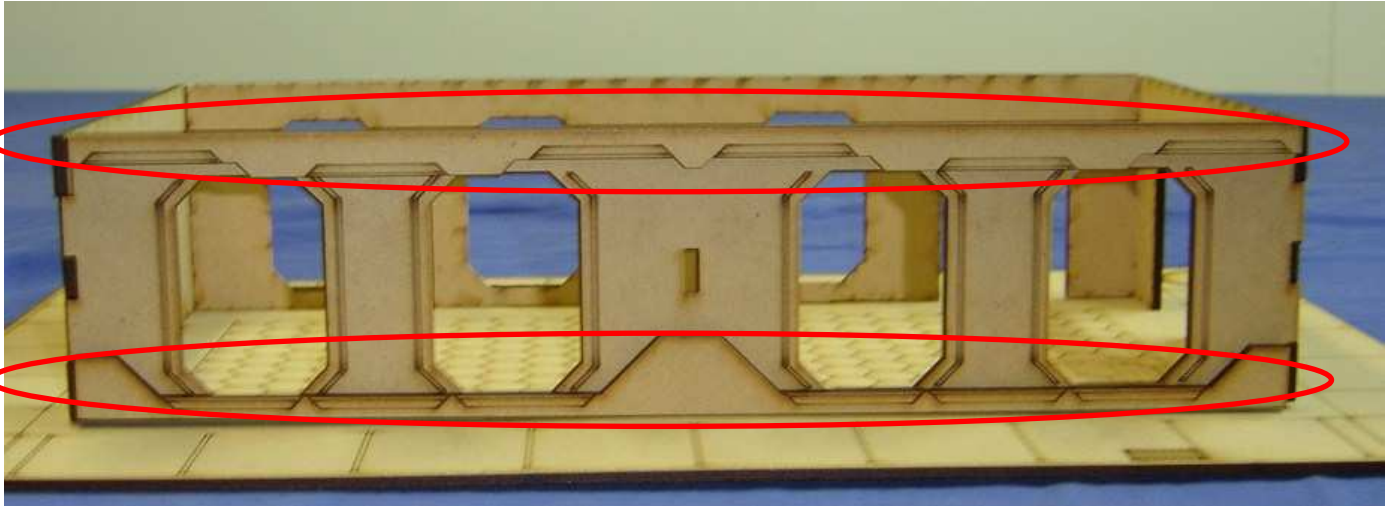

Back Wall with Windows

3. Glue **Roof Clips** into slots in **Floor Plate** on **Side Wall** as shown here circled in **RED**. Repeat this step for the other **Side Wall**.

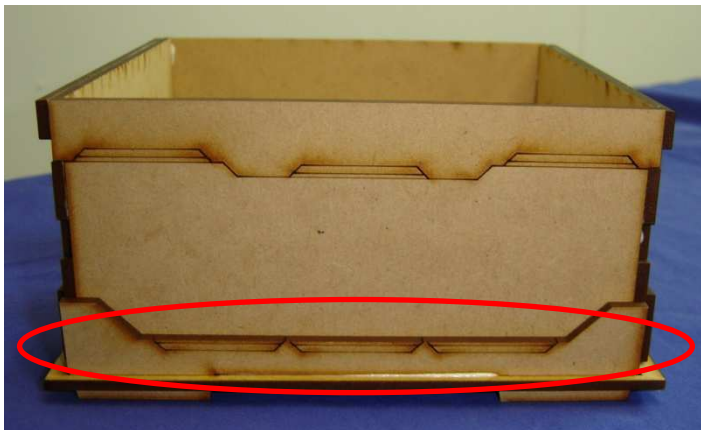

Side Wall


Roof Clips

Note: There are NO **Top Wall Decorations** on the **Side Walls**. This is to allow
for the **Roof** or subsequent floors to be fitted.

4. Glue the **Side Decorations Male and Female** together as shown to make left and right handed versions.



5. Glue the **Side Decorations** to the corresponding slots in the join between **Front and Back Walls** and **Side Walls**. The 3mm notch in the **Side Decorations** goes uppermost. Ensure the **Side Decorations** sit flush with the walls.

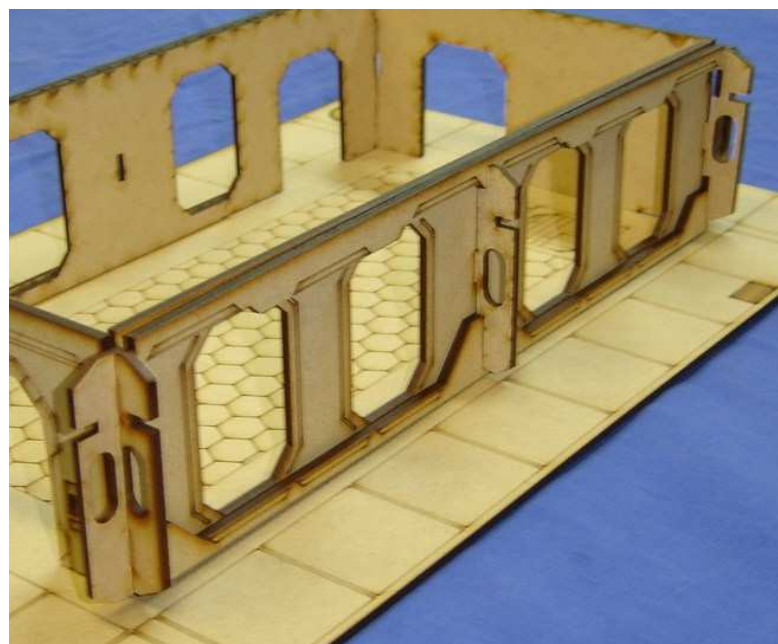


6. Glue the **Wall Centre Decoration** into the slot on the centre beam of the **Back Wall**, with the upper part covering the **Top Wall Decoration** and the bottom part covering the **Bottom Wall decoration**. Repeat this process for **Front** and **Back Walls**.




Instructions for 2nd and 3rd Storey:

7. Glue along bottom and side edge and tabs of **Wall with Windows** and **Side Wall** and insert into corresponding slots in **Floor Plate** as shown.

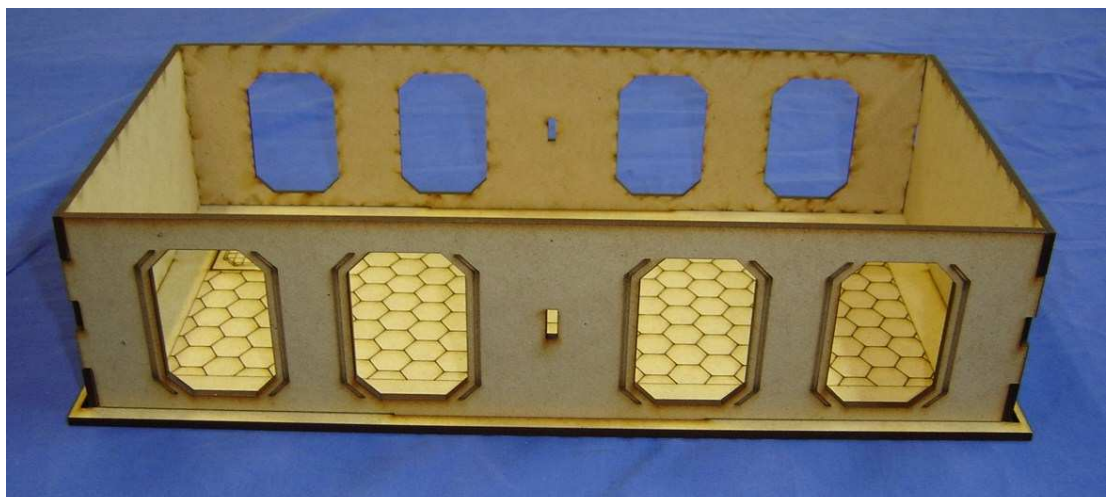


8. Using the following Pictures as a guide, glue the **Top and Bottom Wall Decoration Pieces** (circled in **RED**) to the walls as shown.

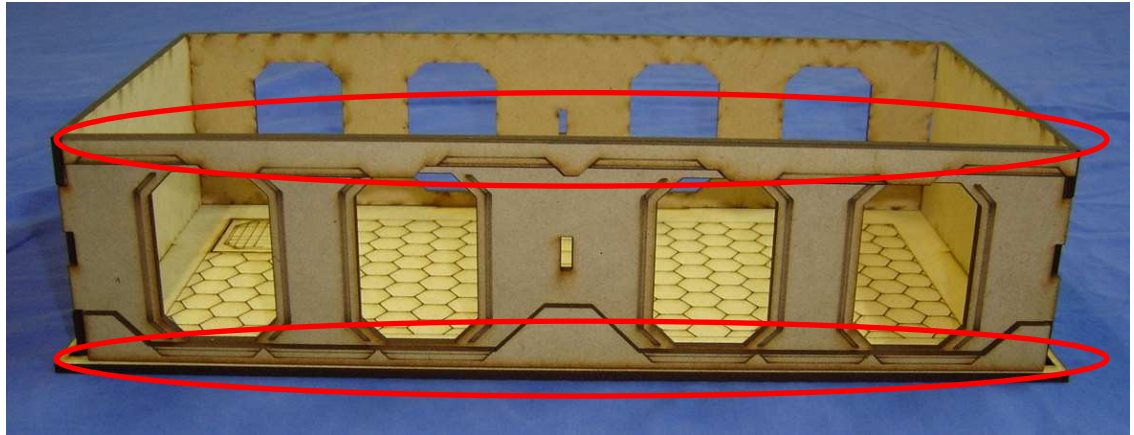

Front and Back Wall with Windows

9. Glue **Roof Clips** into slots in **Floor Plate** on **Side Wall** as shown here circled in **RED**. Repeat this step for the other **Side Wall**.

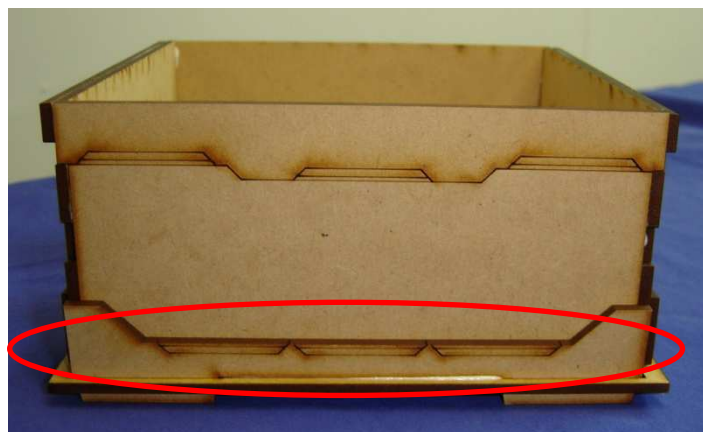

Side Wall

Roof Clips


Note: There are NO **Top Wall Decorations** on the **Side Walls**. This is to allow

for the **Roof** or subsequent floors to be fitted.

10. Glue the **Side Decorations Male and Female** together as shown to make left and right handed versions.



11. Glue the **Side Decorations** to the corresponding slots in the join between **Front and Back Walls** and **Side Walls**. The 3mm notch in the **Side Decorations** goes uppermost. Ensure the **Side Decorations** sit flush with the walls.

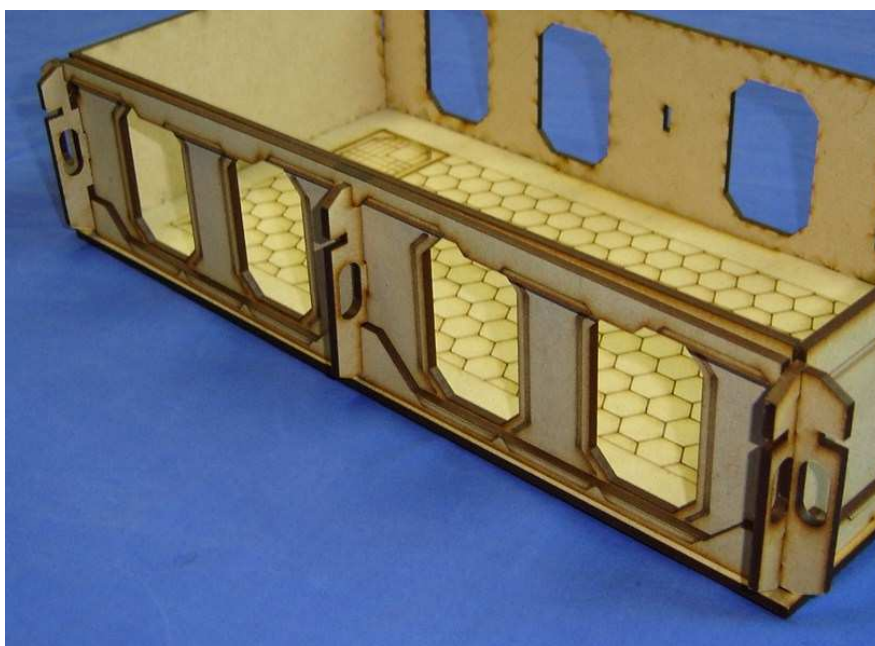


12. Glue the **Wall Centre Decoration** into the slot on the centre beam of the **Back Wall**, with the upper part covering the **Top Wall Decoration** and the bottom part covering the **Bottom Wall decoration**. Repeat this process for **Front** and **Back Walls**.



Assembly Instructions for the Roof:

13. Glue the Long **Roof Balcony** and **Short Roof Balcony** pieces into the corresponding slots as shown.

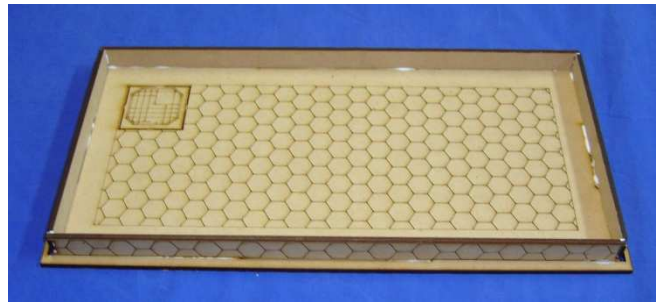

14. Glue the **Roof Clips** into the slots on the short side of the **Roof** as shown.



