广州市华科尔科技有限公司
广州市番禺区东涌镇太石工业区 邮编：511475
电话：（86-20）8491 5115 8491 5116 传真：（86-20）8491 5117
邮箱： info@walkera.com;service@walkera.com

UFO MX400配双向传输安装说明

致广大华科尔用户：

感谢您选购华科尔航空模型产品，为了让您能快捷、安全地掌握UFO MX400双向传输安装说明，请您仔细阅读，同时也请您妥善保存说明书原件，以便以后查阅、参考。

1.将遥测控制盒的天线沿吸塑头盖内侧展开放置，然后用双面胶将遥测控制盒固定在飞碟前面的吸塑头盖上。(如图1)

2.将4根温度传感器电阻端用绝缘胶固定在电机固定架上，线布好后将插头端分别插入遥测控制盒的T1、T2、T3、T4接口。(如图2)

3.将1根电压传感器的正、负极并联焊接在无刷电调的电源线正、负极接点处，线布好后将插头端插入遥测控制盒的V1接口。(如图1)

4.将白红黑线的一端插入接收器的序号⑤（注：端子面朝向左方），另一端插入遥测控制盒的POWER接口。

5.将线整理好即安装完毕。

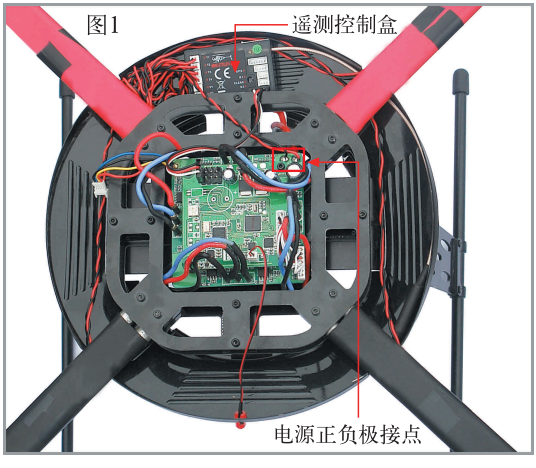

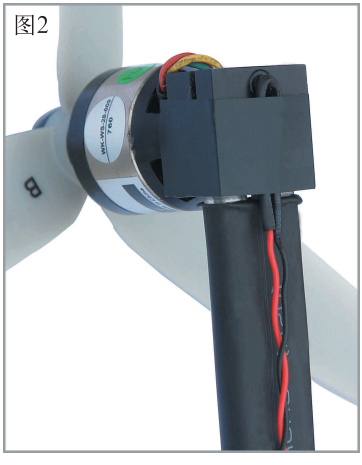

Guangzhou Walkera Technology Co. Ltd.
Taishi Industrial Park, Panyu Dist.,
Guangzhou 511475, China
Tel.: (86-20) 8491 5116 • Fax: (86-20) 8491 5117
Walkera :info@walkera.com;service@walkera.com
Website:www.walkera.com

Installation guides for Telemetry facilites on UFO MX400

Dear customer:

Thank you for purchasing a Walkera radio control aircraft product. In order to quickly and safely in order to quickly and safely to install the telemetry module of UFO MX400, please read the user handbook carefully and then keep it in a safe place for future consultation and reference.

1.Place atenna of module along the backside of the canopy, then fix the module to backside of canopy with double-sided tape.(See Illustration 1)

2.Fix the four temperature sensor resistance terminals to four motor holder with insulation tape. Lay the wires well and plug them separately into T1, T2, T3 and T4 port. (See Illustration 2)

3.Please weld the voltage sensor cable to the power supply cable of ESC, negative pole to negative pole, and positive pole to positive pole, in a parallel connection. Please plug it into V1 jack on module after the cable is layed fine.(See Illustration 1)

4.Plug the three-colored cable(white, red and black) into port ⑤(notes: terminal faces to left), and plug the other end into POWER port on module.
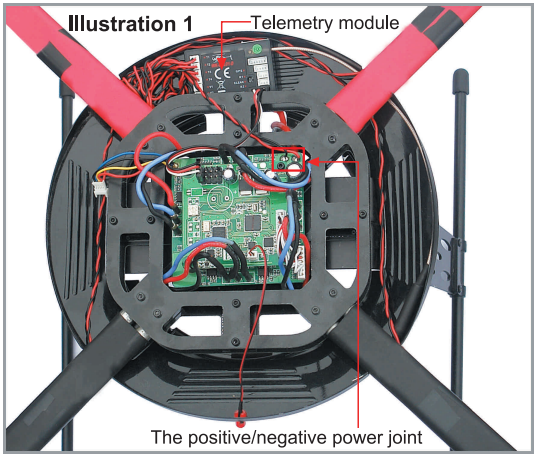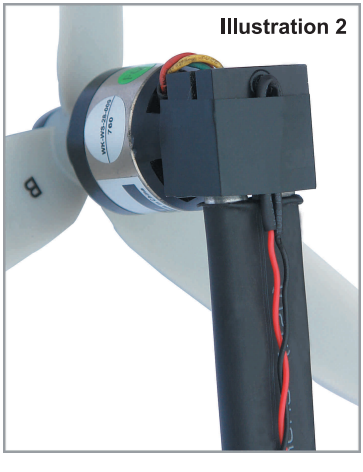
5.Check all the cables and make sure all are fine in position and installation is completed.